



STEEL: 18100, 18101, 18102
ALUMINUM: 18120, 18121, 18122
REAR FLIP SEAT
WILL FIT *E-Z-GO® TXT®
INSTALLATION INSTRUCTIONS


INCLUDED:



Brackets



Footrest Brackets

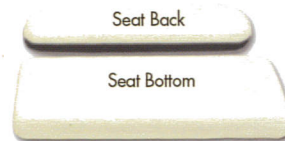

Seat Back

Seat Bottom



Seat Frame


Strap



Bagwell Bracket



Seat Back Brackets

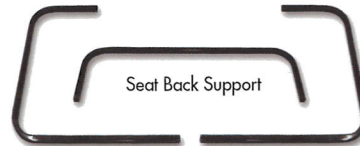

Seat Back Support


Armrests



Footrest


Remove all canopy hardware (nuts, bolts and washers) from four corners (two in front and two in rear) of vehicle canopy. Retain the hardware. You will need them to reattach canopy to vehicle.

1

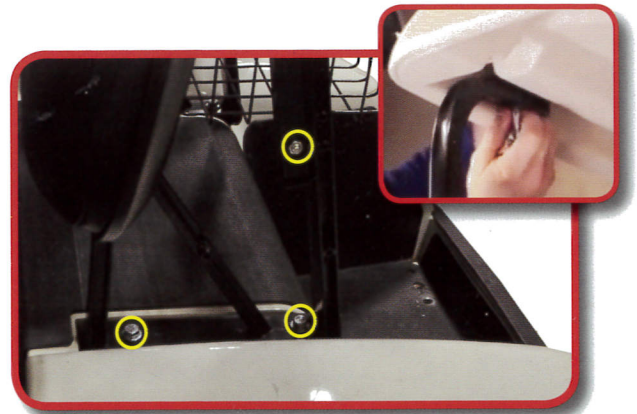


Install main brackets using hardware pack number 4. Position the brackets as shown. Tighten hardware.

2

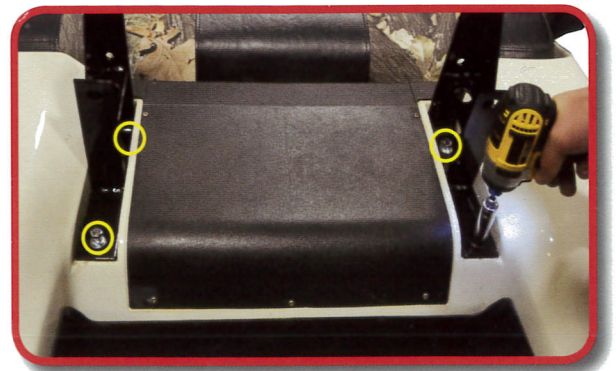

3
Attach bagwell brackets and footplate to outer most holes in bagwell as shown using hardware from pack 2.

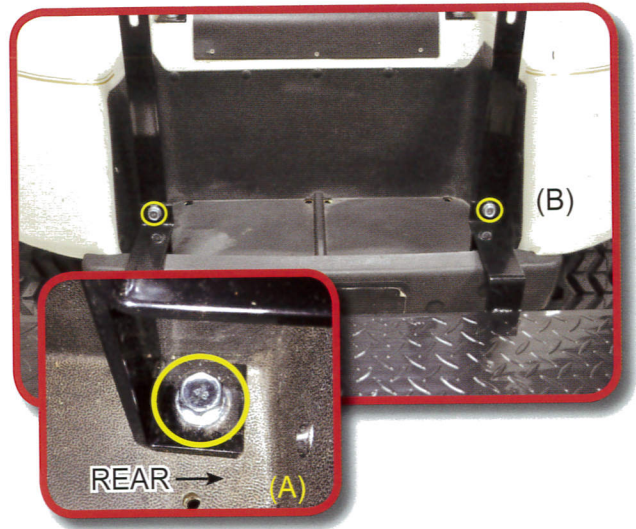


4
Attach rear seat frame. Attach using hardware pack 1. Attach to the two main brackets.




5
Make sure the bagwell brackets sit on the inside of the bars as shown. Mount the seat frame to the top of the bagwell brackets. Do not tighten hardware.




6
Attach armrest to the front edge of seat frame using the hardware from pack 7. *Washer and nut face the outside of the cart. Do not tighten.

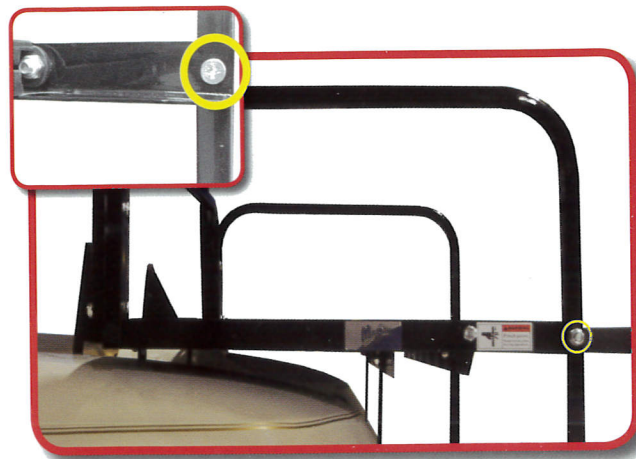


Using hardware from pack 3, attach the seat back support bracket and the armrest in two locations. *Use spacer provided to go inbetween the armrest and seat back support bracket. *Repeat process on the other side. Do not tighten.

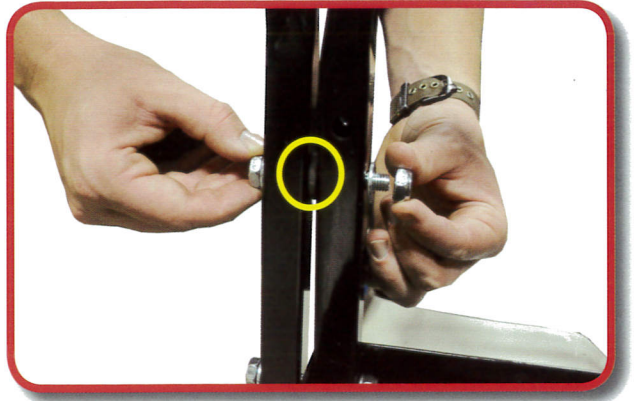


Install the rear struts using hardware from pack 3. Attach at the bottom first. *Repeat process on the other side. Once both bolts are in place tighten all hardware.

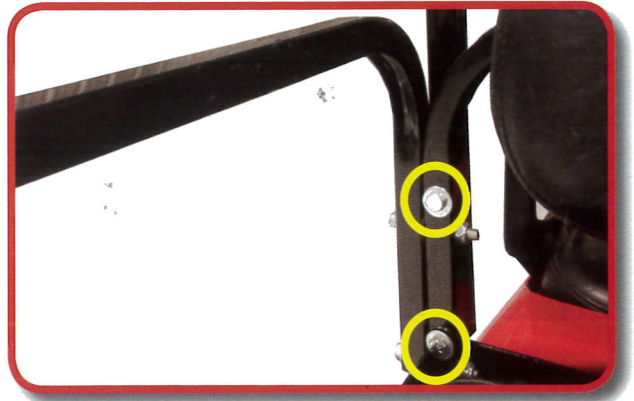

After rear struts are attached remove the brace. Insert the rear struts into the canopy channel. Using the retained hardware, attach rear struts to the canopy.

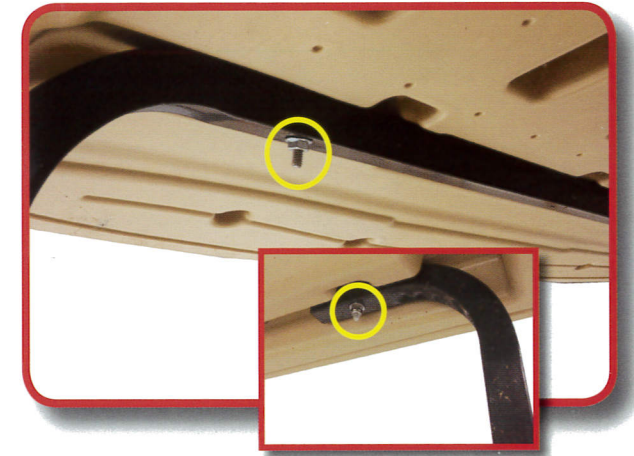

Using remaining hardware from pack 3. Install the foot rest brackets. Bracket goes behind and under footrest. *Repeat process on other side and then tighten.

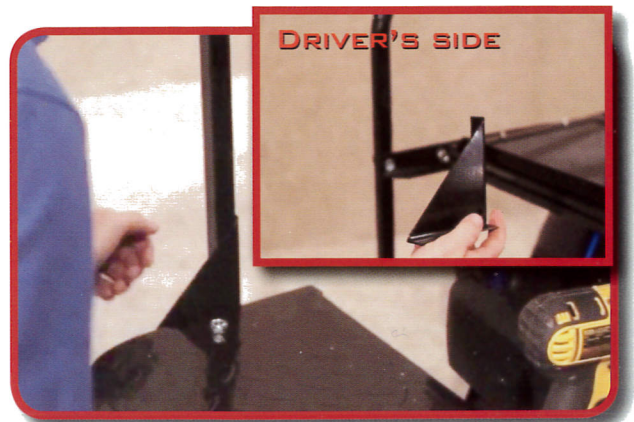


11

Using the hardware from pack 6, install the lean back brackets onto the seat back cushion.



12

Mount the lean back cushion onto the seat back support bracket using remaining hardware from pack 2. Once both sides have been attached tighten bolts.

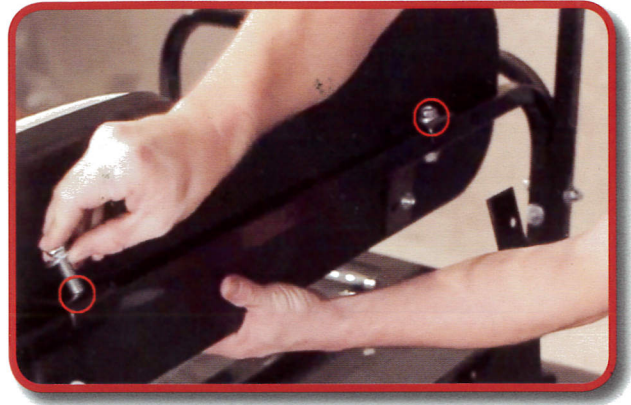

13

To install the seat bottom, first remove the shipping nut shown in the image. *Your strap will go here later.



14

To mount your seat bottom, first make sure the thickest part points towards the footrest. Align seat bottom up and use hardware from pack 8 to attach seat bottom as shown.



15

Attach strap as shown to the area where you removed the nut from step 15. Then re-install the factory supplied seats.



INSTALLATION COMPLETE

